

## Installing the updated version of Whatsminer firmware

08.07.2024

Check the control board model and the firmware version installed. This can be done using **WhatsminerTool**:

Miner IP	Monitoring	Upgrade	Pools	Password	Permissions	Remote Ctrl
IP	Status	Miner Type	V	ersion Info	Power Vers	ion MAC Addr
192.168.10.177	Running	M31S_V90	H6OS-CB4	/10-20230911,12.Rel	P222C-201	2 CA:03:21:00:09:
192.168.10.156	Running	M63S_VK30	H616-CB6	V5-20240329.14.Rel	P564B-202	2 CC:59:12:00:0B:0
192.168.10.150	WaitWork	M66S_VK40	H616-CB6V	7-20240329.14.Rel.LC	P463B-230	1 CC:7B:1D:00:07:
192.168.10.103	WaitWork	M60_VK20	H616-CB6V1	0-20240329.14.Rel.LC	P221B-230	2 CC:08:1F:00:53:0
192.168.10.68	WaitWork	M60_VK20	H616-CB6V1	0-20240329.14.Rel.LC	P221C-202	0 CC:08:1F:00:2F:0
192.168.10.58	Running	M50S_VH40	H616-CB6V1	0-20240329.14.Rel.LC	P221B-454	2 CA:04:08:00:09:0

or by checking the **Status -> Overview** tab in the ASIC web interface:

WhatsMiner_e12d	Status <del>-</del> System	
Status		
System		
Model		WhatsMiner M31S_V90
Hostname		M31S_V90 H616-CB6V10.P222C-V02-193011E
Firmware Version	YYYY year	20220308 19.REL
Kernel Version	MM month ······ DD day	#1368 SMP PREEMPT Tue Mar 8 19:10:42 CST 2022
Miner Version		4.9.2-git-f69e6a1
Local Time		Thu Jul 4 19:40:52 2024
Uptime		0h 2m 13s
Load Average		0.34, 0.18, 0.07



If your device has a control board H3, H6, H6os,

🔯 ВіХВІТ	Status <del>-</del>	System <del>-</del>	Configuration +	😨 AMS (control & monitoring)	Logout 🦪 Support
Status					
System					
Model			WhatsM	liner M31S_V90 Model CB	
Hostname			M31S_V	/90,H6OS-CB4V10.P222C-V02-193	011E
Firmware Version		YYYY year	2023091	D 1.12.Rel	
Custom Version		MM month DD day	1.4.7		
Kernel Version			#1604 S	MP PREEMPT Mon May 8 18:54:2	7 CST 2023
Miner Version			4.9.2-git	-31cef2d	
Local Time			Thu Jul 4	4 19:25:25 2024	
Uptime			0h 1m 1	7s	
Load Average			1.79, 0.5	56, 0.20	

use WhatsminerTool to install the firmware by uploading the file "Whatsminer-ALL-Models\_X.X.X.bin", where "X.X.X" is the firmware version.



If your device has a control board H616 and the firmware version is before December 13, **2023**, or if BiXBiT firmware is already installed:

WhatsMiner_e12d	Status 🕶 Syste	em → Configuration → Logout	
Status			
System			
Model		WhatsMiner M31S_V90	
Hostname		M31S_V90, H616-CB6V10.P222C-V02-193011E	
(Firmware Version)	YYYY year	YYYMMDD 20220308.19.REL	
Kernel Version	MM month · DD day	#1368 SMP PREEMPT Tue Mar 8 19:10:42 CST 2022	
Miner Version		4.9.2-git-f69e6a1	
Local Time		Thu Jul 4 19:40:52 2024	
Uptime		0h 2m 13s	
Load Average		0.34, 0.18, 0.07	

use WhatsminerTool to install the intermediate firmware by uploading the file "Whatsminer-ALL-Models\_X.X.X\_h616-before20231213.bin". After installing the intermediate version, update the ASIC to the latest BiXBiT firmware using WhatsminerTool with the file "Whatsminer-ALL-Models\_X.X.X.bin".



If your device has a control board H616 and the firmware version is after December 13, 2023:

WhatsMiner_df1b	Status 🕶 Systen	n + Configuration + Logout
Status		
System		
Model		WhatsMiner M30S+_V70
Hardware Info		M30S+_V70(H616)CB6V10.P222C-V02-193004B
(Firmware Version)	YYYY year	YYYMMDD 20240329 14.Rel
Kernel Version	MM month · DD day	#1352 SMP PREEMPT Mon Sep 11 12:18:07 CST 2023
Miner Version		4.9.2-git-8b0cc13
Local Time		Mon May 6 22:51:02 2024
Uptime		0h 27m 22s
Load Average		1.94, 1.87, 1.57

use the firmware image "Whatsminer-ALL-Models\_X.X.X\_h616-after20231213.img" and the PhoenixCard utility to write the intermediate firmware version to an SD card. Then use the SD card to flash your device to the intermediate firmware version. After installing the intermediate firmware version, update your ASIC to the latest BiXBiT firmware using WhatsminerTool with the file "Whatsminer-ALL-Models\_X.X.X.bin".

A detailed process for flashing the ASIC via SD card is shown in the video at the link.

After installation, refer to the detailed documentation on working with ASIC Whatsminer on BiXBiT firmware.

